

## Inovonics EN7290 Receiver/Interface for VISTA Panels


### Question

What are the steps to setup an Inovonics EN7290 Module on a Vista Panel?


### Answer

**STEP 1.** Connect the EN7290 to Vista Panel Keypad bus. Red to +, Black to -, DO to Green, DI to Yellow.

**STEP 2.** Register all the Inovonics transmitters into the EN7290 using each transmitters 6 digit TXID Number (Following the EN290 instructions). The TXID number is found on a label on the device PCB as shown here.

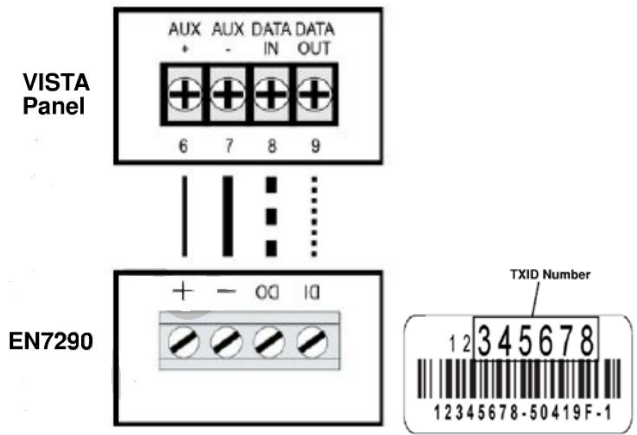

**STEP 3.** Set EN7290 Address DIP Switches to address (0 to 7) that is programmed as a RF RECEIVER in the Vista Control Panel. (Resi Vista = 0, Commercial Vista = 1-7)

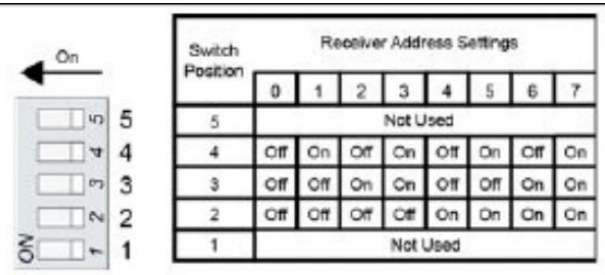

**STEP 4.** Program or Learn the transmitter serial number into the Vista Control Panel zones following standard RF transmitter zone programming process. If entering by hand use the Transmitters Six digit TXID preceded with a Zero.